Паспорт

MODEL NUMBER _____

SERIES

SERIAL № _____




Repair

ProConnect Endurance Displacement Pump

For professional use only.

Models: 17C487, 17C488, 17C489, 17C721, 17M992, 24Z731, 19Y298

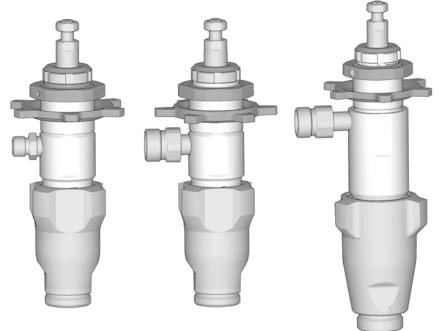

ti24850c



ОКРАСОЧНОЕ ОБОРУДОВАНИЕ

ПРОЕКТИРОВАНИЕ, ПОСТАВКА, ОБСЛУЖИВАНИЕ

ООО «ТК Дженерал Инжиниринг» 107023, г. Москва, ул. Малая Семёновская, д.11/2, строение 2 +7 800 500 08 91 БЕСПЛАТНО ПО РОССИИ ⊠ info@gnrg.ru

www.GNRG.RU

Contents

Contents

Warnings 3
Pressure Relief
Trigger Lock
Pressure Relief Procedure
Pump Removal
Repair
Dissemble Pump
Assemble Pump 11
Pump Installation
Parts
Parts List
Parts
Parts List
Technical Specifications 22
Graco Standard Warranty
Graco Information

Warnings

The following warnings are for the setup, use, grounding, maintenance, and repair of this equipment. The exclamation point symbol alerts you to a general warning and the hazard symbols refer to procedure-specific risks. When these symbols appear in the body of this manual or on warning labels, refer back to these Warnings. Product-specific hazard symbols and warnings not covered in this section may appear throughout the body of this manual where applicable.

	AWARNING
\wedge	FIRE AND EXPLOSION HAZARD
	 Flammable fumes, such as solvent and paint fumes, in work area can ignite or explode. To help prevent fire and explosion: Do not spray flammable or combustible materials near an open flame or sources of ignition such as cigarettes, motors, and electrical equipment. Paint or solvent flowing through the equipment is able to result in static electricity. Static electricity creates a risk of fire or explosion in the presence of paint or solvent flowing through the equipment is able to result in static electricity. Static electricity creates a risk of fire or explosion in the presence of paint or solvent flowing through the equipment is able to result in static electricity. Static electricity creates a risk of fire or explosion in the presence of paint or solvent flowing through the equipment is able to result in static electricity. Static electricity creates a risk of fire or explosion in the presence of paint or solvent fumes. All parts of the spray system, including the pump, hose assembly, spray gun, and objects in and around the spray area shall be properly grounded to protect against static discharge. Do not use pail liners unless they are anti static or conductive. Connect to a grounded outlet and use grounded extensions cords. Do not use a 3-to-2 adapter. Do not use paint or a solvent containing halogenated hydrocarbons. Do not spray flammable or combustible liquids in a confined area. Keep spray area well-ventilated. Keep a good supply of fresh air moving through the area. Sprayer generates sparks. Keep pump assembly in a well ventilated area at least 20 feet (6.1 m) from the spray area or spray where sparks or flame is present. Do not operate light switches, engines, or similar spark producing products in the spray area. Keep area clean and free of paint or solvent containers, rags, and other flammable materials. Know the contents of the paints and solvents being sprayed. Read all Safety Data Sheets (SDS) and




9	SKIN INJECTION HAZARD
	 High-pressure spray is able to inject toxins into the body and cause serious bodily injury. In the event that injection occurs, get immediate surgical treatment. Do not aim the gun at, or spray any person or animal. Keep hands and other body parts away from the discharge. For example, do not try to stop leaks with any part of the body. Always use the nozzle tip guard. Do not spray without nozzle tip guard in place. Use Graco nozzle tips. Use caution when cleaning and changing nozzle tips. In the case where the nozzle tip clogs while spraying, follow the Pressure Relief Procedure for turning off the unit and relieving the pressure before removing the nozzle tip to clean. Equipment maintains pressure after power is shut off. Do not leave the equipment energized or under pressure while unattended. Follow the Pressure Relief Procedure when the equipment is unattended or not in use, and before servicing, cleaning, or removing parts. Check hoses and parts for signs of damage. Replace any damaged hoses or parts. This system is capable of producing 3300 psi. Use Graco replacement parts or accessories that are rated a minimum of 3300 psi. Always engage the trigger lock when not spraying. Verify the trigger lock is functioning properly. Verify that all connections are secure before operating the unit. Know how to stop the unit and bleed pressure quickly. Be thoroughly familiar with the
-	controls.
	 PRESSURIZED ALUMINUM PARTS HAZARD Use of fluids that are incompatible with aluminum in pressurized equipment can cause serious chemical reaction and equipment rupture. Failure to follow this warning can result in death, serious injury, or property damage. Do not use 1,1,1-trichloroethane, methylene chloride, other halogenated hydrocarbon solvents or fluids containing such solvents. Do not use chlorine bleach. Many other fluids may contain chemicals that can react with aluminum. Contact your material supplier for compatibility.
2	TOXIC FLUID OR FUMES HAZARD
	 Toxic fluids or fumes can cause serious injury or death if splashed in the eyes or on skin, inhaled, or swallowed. Read SDSs to know the specific hazards of the fluids you are using. Store hazardous fluid in approved containers, and dispose of it according to applicable guidelines.
0	PERSONAL PROTECTIVE EQUIPMENT
	 Wear appropriate protective equipment when in the work area to help prevent serious injury, including eye injury, hearing loss, inhalation of toxic fumes, and burns. This protective equipment includes but is not limited to: Protective eye wear, and hearing protection. Respirators, protective clothing, and gloves as recommended by the fluid and solvent manufacturer.
	CALIFORNIA PROPOSITION 65
	This product contains a chemical known to the State of California to cause cancer, birth defects or other reproductive harm. Wash hands after handling.

Pressure Relief


Pressure Relief

Trigger Lock

Always engage the trigger lock when sprayer is stopped to prevent the gun from being triggered accidentally by hand or if dropped or bumped.

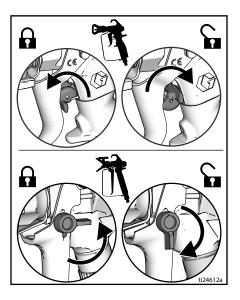

LineLazer ES 1000




Pressure Relief Procedure




This equipment stays pressurized until pressure is manually relieved. To help prevent serious injury from pressurized fluid, such as skin injection, splashed fluid and moving parts, follow the Pressure Relief Procedure whenever sprayer is stopped and before sprayer is cleaned or checked, and before equipment is serviced.

1. Engage the trigger lock.

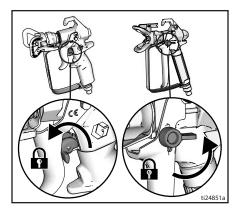


LineLazer ES 1000




Pressure Relief

 Turn the ON/OFF switch to OFF position. Wait 7 seconds for power to dissipate.

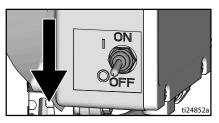


3. Unplug power cord or shut engine off. For LineLazer ES 1000, unplug power cord and disconnect battery.



- 4. Engage the trigger lock.
- 5. Remove tip guard.

6. Turn pressure control to the lowest setting. Disengage trigger lock.

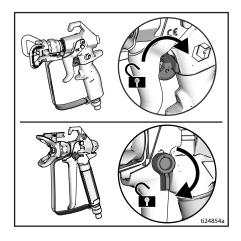


LineLazer ES 1000




Pressure Relief

7. Hold a metal part of the gun firmly to a grounded metal pail. Trigger the gun to relieve pressure.

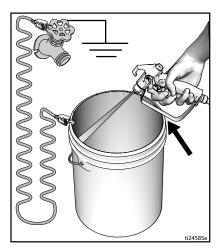


- 8. Engage the trigger lock.
 - ti24855a

LineLazer ES 1000



Open any fluid drain valves in system. 9. Leave drain valves open until ready to spray again.

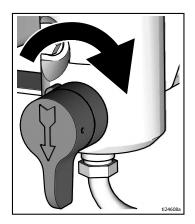


Pump Removal


Pump Removal

Pump removal includes disconnecting the fluid inlet and outlet and removing the pump.


1. Use a hammer to loosen pump retaining nut.

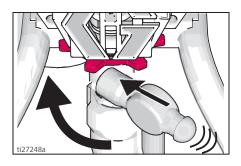


2. Turn pump retaining nut to free pump rod cover.

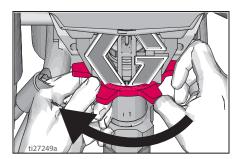


3. Swing pump rod cover open.

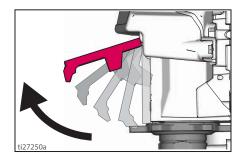

4. Disconnect outlet hose and suction hose from pump.

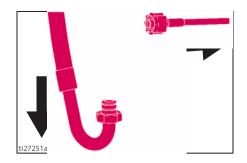


5. Slide pump out of the drive housing.

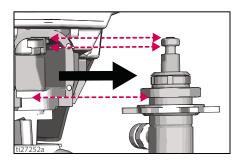


Repair

Dissemble Pump

1. Remove packing nut and throat adjustment spacer. Retaining nuts are not removable and not sold separately.

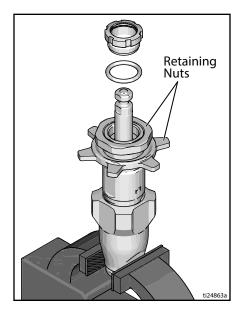


2. Unscrew cylinder from intake valve.

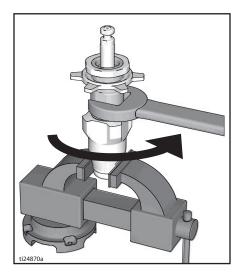


 Dissemble intake valve. Clean and inspect. O-ring may require a pick for removal.

NOTICE

If using a pick to remove the O-ring use care to avoid damage to the machined surfaces.

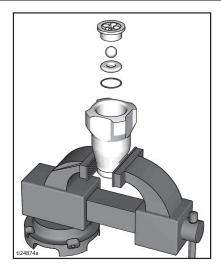


4. Tap piston rod out of cylinder with a hammer or flip over and tap piston rod out against a bench.

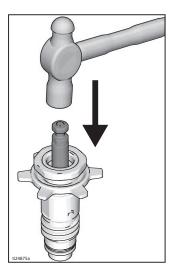


Repair

 For Model 19Y298 Only: Remove piston rod from sleeve, or remove sleeve from cylinder if only rod was removed in previous step. Ensure o-ring inside cylinder is removed.

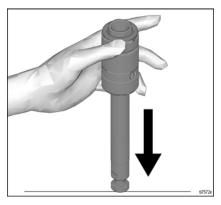


6. Unscrew piston valve from piston rod.

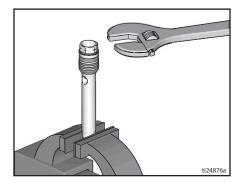




Do not clean or wipe the piston valve threads. Cleaning the piston valve threads could destroy the special sealing patch and cause the piston valve to come loose during operation, causing a pump burst and possible serious bodily injury. 7. Clean and inspect parts. (The piston has a special thread locking/sealing patch. Apply thread sealant to the threads.

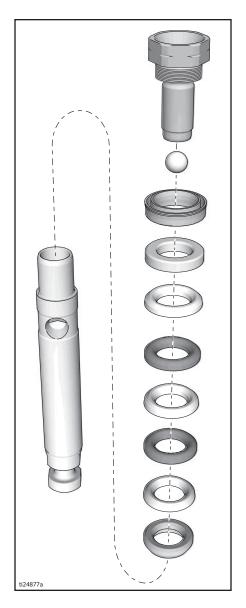





8. Remove and discard throat packing and glands from the cylinder.

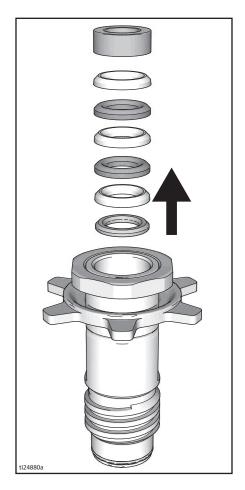

Assemble Pump


1. Soak leather packings in SAE 30W oil for one hour before assembly.

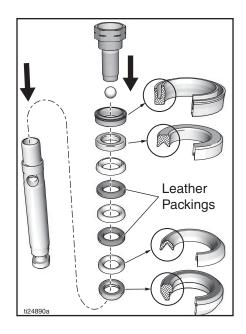

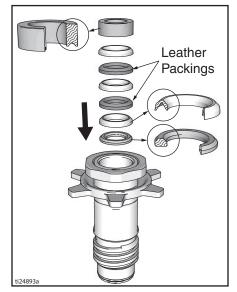


Repair


2. Install ball in piston rod. If thread sealant is applied to piston valve threads, ensure that none gets on the ball.

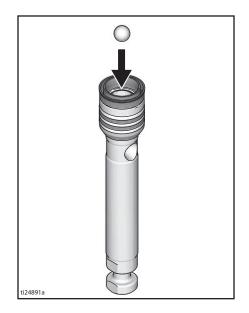


3. Torque to 27 ± 3 ft-lb (37 ± 4 N•m).

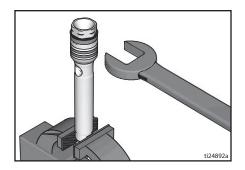

4. Assemble leather throat packings soaked earlier.

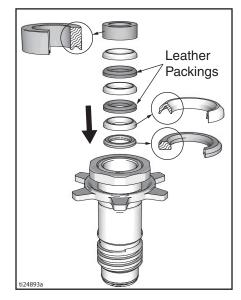


5. Loosely install packing nut with o-ring onto cylinder.

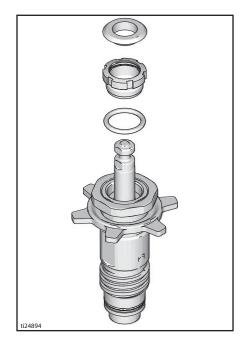




6. Apply liberal amounts of grease or oil to piston packings.

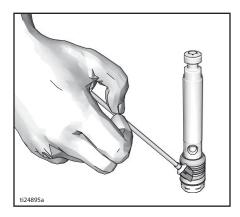


 Grease top inch or two of piston rod that will go through the cylinder throat packings. Gently guide displacement rod up through throat packings. Tap bottom of piston valve as necessary with a leather or plastic hammer.

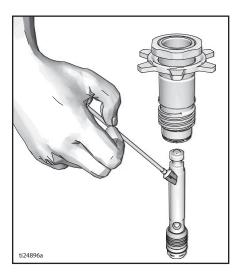

 For Model 19Y298 Only: Slide piston assembly (with force) into bottom of sleeve.




9. For Model 19Y298 Only: Grease top inch or two of piston rod that will go through the cylinder throat packings.

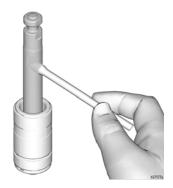


Repair


10. For Model 19Y298 Only: Grease o-rings (231 and 219) and place on sleeve (232). Slide sleeve/piston rod assembly into bottom of cylinder. Replace o-ring (230) if desired.

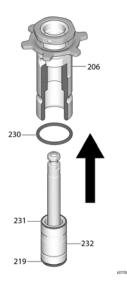

11. Grease o-ring and place on outside diameter ring groove.

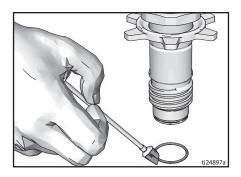


12. Clean seat thoroughly. Reassemble intake valve with a seat, ball, and new o-ring. Seat may be flipped over and used on other side.

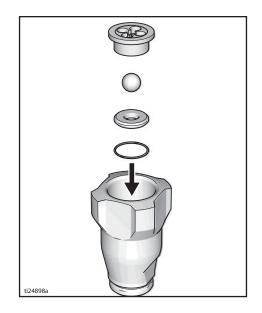


13. Torque to 100 ± 5 ft-lb (136 ± 7 N•m).

For Model 19Y298: Torque to 135 ± 7 ft-lb (183 ± 9 N•m)

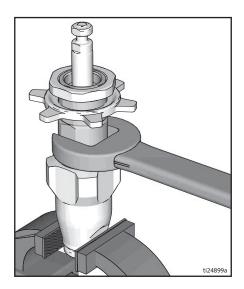



14. Install o-ring onto packing nut. Torque to 75 ± 5 in-lb (8.5 ± 0.5 N•m) or additional 1/2 turn from hand tight.

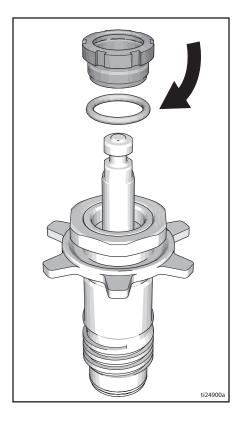

15. Storage






Throat Packing Adjustment



This equipment stays pressurized until pressure is manually relieved. To help prevent serious injury from pressurized fluid, such as skin injection, splashed fluid and moving parts, follow the **Pressure Relief Procedure** whenever sprayer is stopped and before sprayer is cleaned or checked, and before equipment is serviced.

When pump packings begin to leak after perform Pressure Relief much use, Procedure, page 5 and tighten packing nut down until leakage stops or lessens. This gallons allows approximately 100 of additional operation before a repacking is required. Packing nut can be tightened without o-ring removal.

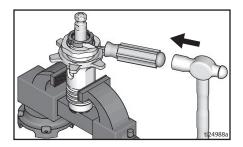


Pump Installation


Pump Installation

Pump installation includes securing the pump and connecting to the fluid inlet and outlet.


1. Connect outlet hose to pump.



 Move pump displacement rod up or down until it slides into the connecting rod when the pump is slid into the drive housing.




3. Slide pump all the way into drive housing.

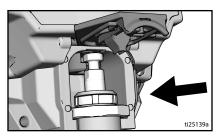


4. Close pump rod cover. Make certain that it is flush against drive housing.




5. Use both hands to tighten pump retaining nut.

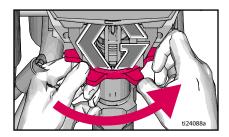

6. Use a hammer to turn pump retaining nut an additional 1/8 to 1/6th turn or 45° to 60° .

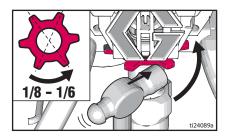


7. Install suction hose.

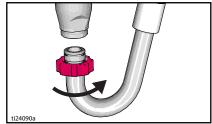

Parts

Parts

Models 17C487, 17C488, 17C489, 17C121, 17M992, 24Z731

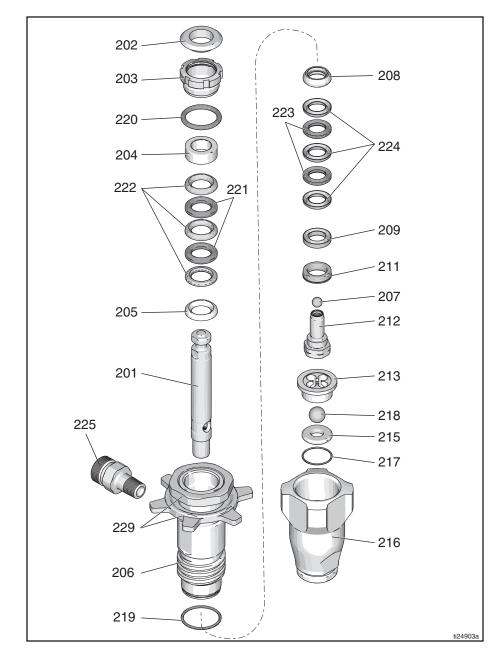




Parts List

Models 17C487, 17C488, 17C489, 17C121, 17M992, 24Z731

Ref.	Part	Description	Qty.	Ref.		Description	Qty.
201	24W617	ROD, displacement,	1	220*	160516		1
000*	100656	includes 212	4	221*	176755	V-PACKING, leather, throat	2
202* 203	180656 193047	BUTTON, plug NUT, packing	1	222*	192710	V-PACKING, throat,	3
204*	176757	GLAND, female, throat	1			V-Max TM	
205*	176754	GLAND, male throat	1			UHMWPE, blue	
206	24W619	/ I I	1	223*	176749	V-PACKING, leather,	2
207*	105444	<i>includes 219, 229</i> BALL, sst, 0.3125 in.	4			piston	-
207 208*	195129	GLAND, male piston	1	224*	192712	V-PACKING, piston,	3
209*	180073		1			V-Max TM	
211*	15G234		1	005		UHMWPE, blue	
212	239937	VALVE, piston	1	225 Model	ls 17C/87	, 17C488, 17C489, 17C	721
0101	450044	(included with 201)		inioue	17C231	FITTING, pump, QD,	1
213† 215†	15C011 246429	GUIDE, ball KIT, seat, carbide	1			1/4 npt	-
2151	240423	includes 213, 217 and	I	Mode	17M992		
		218			162453	FITTING, 1/4 npt	. 1
216	15B611	VALVE, intake housing	1	229	NUIS, re	etaining, not sold separa	ately
217*†	15B112	PACKING, o-ring	1	* - Als	o included	l in Kit 18B260 (formerly	/ part
010*+	105115	(0.941 in. OD)			er 244194	· · ·	1.00
218 [^] T 219*	105445 17V093	BALL, sst, 0.5000 in. PACKING, o-ring	1			d in Kit 246429	
213	11 0 93	r Aortina, o-mig	I				

Parts

Parts Model 19Y298

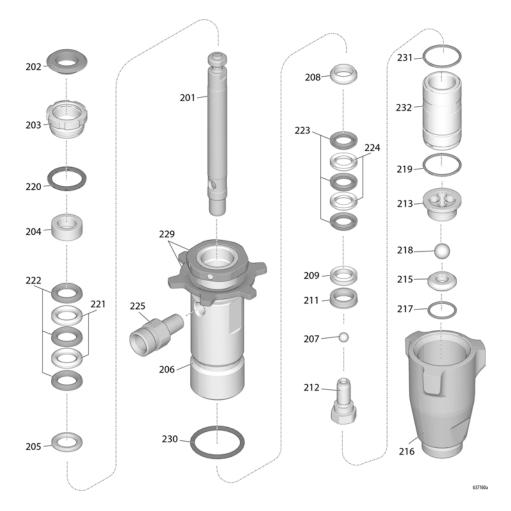



Parts List

Models 19Y298

Ref.	Part	Description	Qty.	Ref.	Part	Description	Qty.
201	19Y268	ROD, displacement,	1	220*	160516	O-RING	1
		includes 212		221*	176755	V-PACKING, leather,	2
202*	180656	BUTTON, plug	1			throat	
203	193047	NUT, packing	1	222*	192710	V-PACKING, throat,	3
204*	176757	GLAND, female, throat	1			V-Max TM	
205*	176754	GLAND, male throat	1			UHMWPE, blue	
206	19Y267	CYLINDER, pump	1	223*	176749	V-PACKING, leather,	2
		includes 219, 229				piston	
207*	105444	BALL, sst, 0.3125 in.	1	224*	192712	V-PACKING, piston,	3
208*	195129	GLAND, male piston	1			V-Max TM	-
209*	180073	GLAND, female, piston	1				
211*	15G234	GUIDE, piston	1	005	170001	UHMWPE, blue	-
212	239937	VALVE, piston	1	225	17C231	FITTING, pump, QD,	I
		(included with 201)		000	NUTO	1/4 npt	
213 1	192624	GUIDE, ball	1	229		etaining, not sold separa	ately
215 1	239922	KIT, seat, carbide	1	230	156593	O-RING, cylinder	1
		includes 213, 217 and		231	108526	O-RING, sleeve SLEEVE	1
		218		232	19Y269	SLEEVE	I
216	15C785	VALVE, intake housing	1	* \	o includor	d in Kit 18B260 (formerly	(nort
217*†	107079	PACKING, o-ring	1				/ pan
		(0.941 in. OD)			er 244194	h) d in Kit 239922	
218*†	105445	BALL, sst, 0.5000 in.	1	I - AR		u 111 Kil 239922	
219*	17V093	PACKING, o-ring	1				
		-					

Technical Specifications

Technical Specifications

PC Displacement Pump					
	US	Metric			
Maximum fluid working pressure	3300 psi	228 bar, 22.8 MPa			
Inlet/Outlet Sizes					
Fluid inlet size	1.0 in. diameter				
Fluid outlet size	1/4 in.				
Wetted materials on all models	stainless steel, PTFE, leather, nylon, zinc-plated and nickel-plated carbon steel, tungsten carbide, chrome plating, UHMWPE, acetal, polyethylene, nylon				

Graco Standard Warranty

Graco Standard Warranty

Graco warrants all equipment referenced in this document which is manufactured by Graco and bearing its name to be free from defects in material and workmanship on the date of sale to the original purchaser for use. With the exception of any special, extended, or limited warranty published by Graco, Graco will, for a period of twelve months from the date of sale, repair or replace any part of the equipment determined by Graco to be defective. This warranty applies only when the equipment is installed, operated and maintained in accordance with Graco's written recommendations.

This warranty does not cover, and Graco shall not be liable for general wear and tear, or any malfunction, damage or wear caused by faulty installation, misapplication, abrasion, corrosion, inadequate or improper maintenance, negligence, accident, tampering, or substitution of non-Graco component parts. Nor shall Graco be liable for malfunction, damage or wear caused by the incompatibility of Graco equipment with structures, accessories, equipment or materials not supplied by Graco, or the improper design, manufacture, installation, operation or maintenance of structures, accessories, equipment or materials not supplied by Graco.

This warranty is conditioned upon the prepaid return of the equipment claimed to be defective to an authorized Graco distributor for verification of the claimed defect. If the claimed defect is verified, Graco will repair or replace free of charge any defective parts. The equipment will be returned to the original purchaser transportation prepaid. If inspection of the equipment does not disclose any defect in material or workmanship, repairs will be made at a reasonable charge, which charges may include the costs of parts, labor, and transportation.

THIS WARRANTY IS EXCLUSIVE, AND IS IN LIEU OF ANY OTHER WARRANTIES, EXPRESS OR IMPLIED, INCLUDING BUT NOT LIMITED TO WARRANTY OF MERCHANTABILITY OR WARRANTY OF FITNESS FOR A PARTICULAR PURPOSE.

Graco's sole obligation and buyer's sole remedy for any breach of warranty shall be as set forth above. The buyer agrees that no other remedy (including, but not limited to, incidental or consequential damages for lost profits, lost sales, injury to person or property, or any other incidental or consequential loss) shall be available. Any action for breach of warranty must be brought within two (2) years of the date of sale.

GRACO MAKES NO WARRANTY, AND DISCLAIMS ALL IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, IN CONNECTION WITH ACCESSORIES, EQUIPMENT, MATERIALS OR COMPONENTS SOLD BUT NOT MANUFACTURED

BY GRACO. These items sold, but not manufactured by Graco (such as electric motors, switches, hose, etc.), are subject to the warranty, if any, of their manufacturer. Graco will provide purchaser with reasonable assistance in making any claim for breach of these warranties.

In no event will Graco be liable for indirect, incidental, special or consequential damages resulting from Graco supplying equipment hereunder, or the furnishing, performance, or use of any products or other goods sold hereto, whether due to a breach of contract, breach of warranty, the negligence of Graco, or otherwise.

FOR GRACO CANADA CUSTOMERS

The Parties acknowledge that they have required that the present document, as well as all documents, notices and legal proceedings entered into, given or instituted pursuant hereto or relating directly or indirectly hereto, be drawn up in English. Les parties reconnaissent avoir convenu que la rédaction du présente document sera en Anglais, ainsi que tous documents, avis et procédures judiciaires exécutés, donnés ou intentés, à la suite de ou en rapport, directement ou indirectement, avec les procédures concernées.

Graco Information

For the latest information about Graco products, visit www.graco.com.

For patent information, see www.graco.com/patents.

TO PLACE AN ORDER, contact your Graco distributor or call 1-800-690-2894 to identify the nearest distributor.

All written and visual data contained in this document reflects the latest product information available at the time of publication. Graco reserves the right to make changes at any time without notice.

Original instructions. This manual contains English. MM 334599

Graco Headquarters: Minneapolis International Offices: Belgium, China, Japan, Korea

GRACO INC. AND SUBSIDIARIES • P.O. BOX 1441 • MINNEAPOLIS MN 55440-1441 • USA

Copyright 2014, Graco Inc. All Graco manufacturing locations are registered to ISO 9001. www.graco.com

Revision H, October 2019